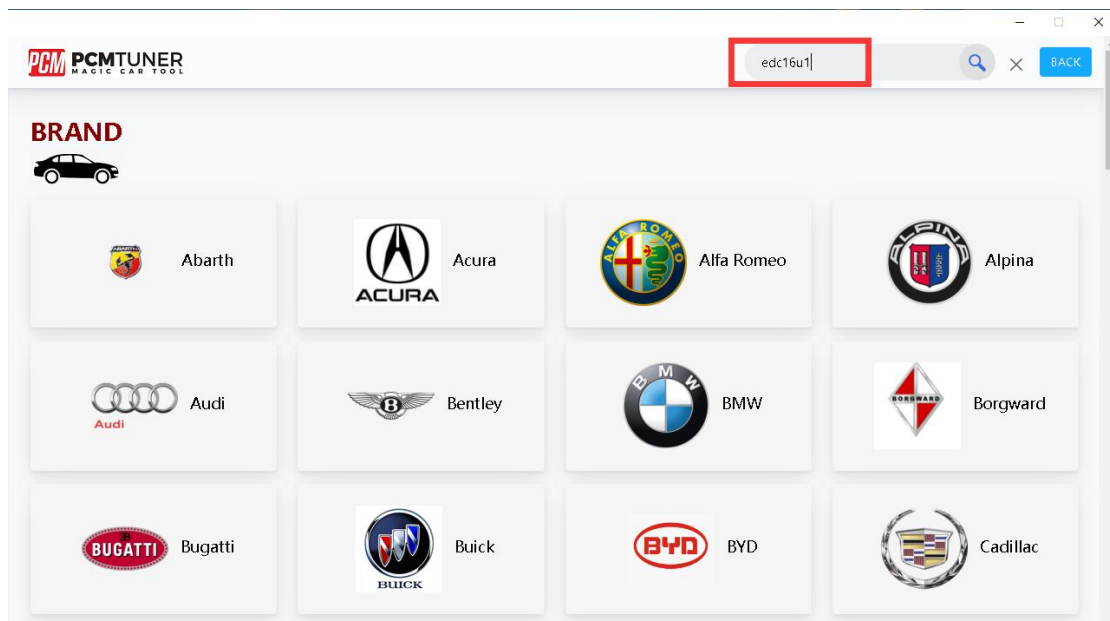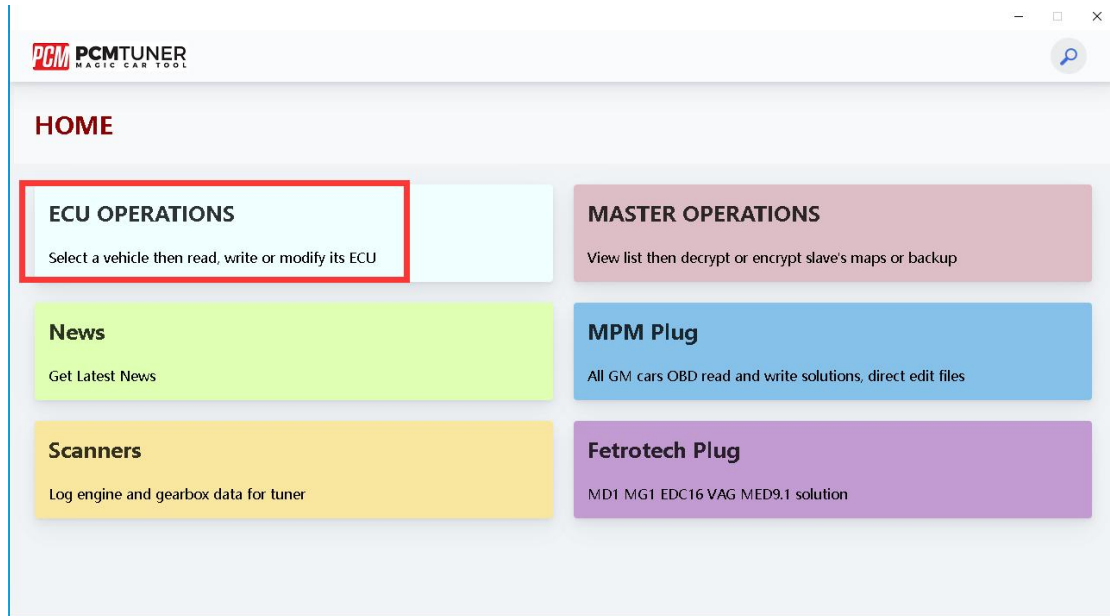How to View Fetrotech Tool Wiring Diagrams

1. Users with PCMtuner devices can search it in the PCMtuner app, take audi edc16u1 as an example, and follow the steps below:

SEARCH RESULTS

Brand - Model - Engine	ECU	MCU	Action
Audi - A3 - 1900 TDI (105 hp)	BOSCH EDC16U1	MPC556	Show
Audi - A3 - 1900 TDI (105 hp)	BOSCH EDC16U1	MPC556	Show
Audi - A3 - 2000 16v TDI (140 hp)	BOSCH EDC16U1	MPC556	Show
Audi - A3 - 2000 TDI quattro (136 hp)	BOSCH EDC16U1	MPC556	Show
Chrysler - Sebring - 2000 CRD (140 hp)	BOSCH EDC16U1	MPC556	Show
Mitsubishi - Grandis - 2000 DI-D (165 hp)	BOSCH EDC16U1	MPC556	Show
Mitsubishi - Lancer - 2000 DI-D (140 hp)	BOSCH EDC16U1	MPC556	Show
Mitsubishi - Outlander - 2000 DI-D (140 hp)	BOSCH EDC16U1	MPC556	Show
Seat - Alhambra - 2000 TDI (140 hp)	BOSCH EDC16U1	MPC556	Show
Seat - Altea - 1900 TDI (105 hp)	BOSCH EDC16U1	MPC556	Show

PCM **PCMTUNER**
MAGIC CAR TOOL

BACK

OPERATIONS

Audi > A3 1999-2008 > Audi - A3 - 1900 TDI (105 hp)

ECU programming

BENCH

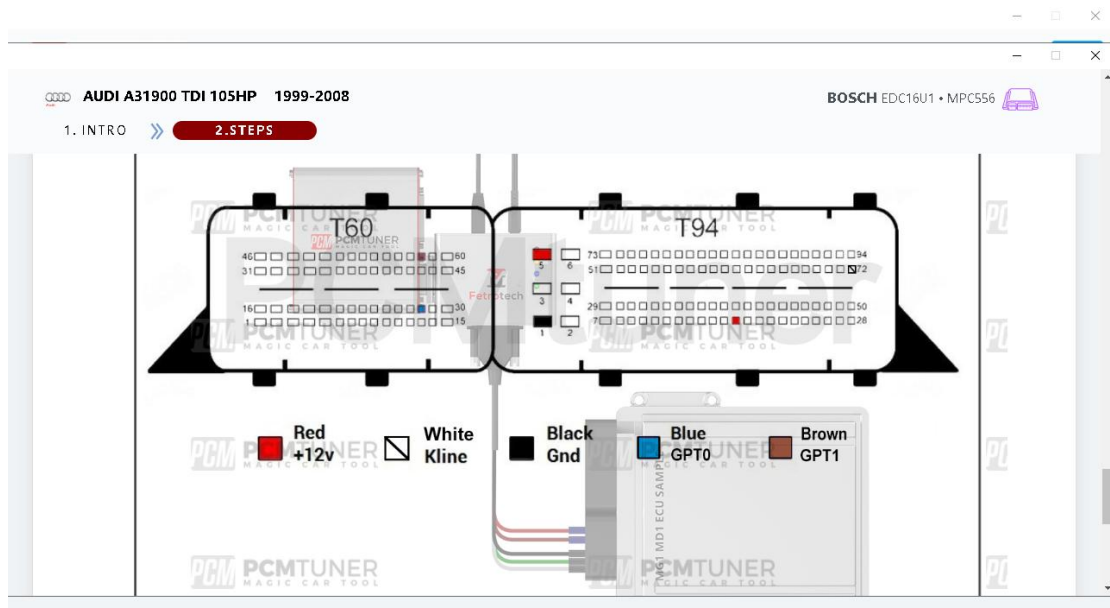This Method only requires removing the ECU from the engine bay.

BOOT

This Method requires disassembly and opeining of the engine ECU

OBD

This Method allows you to read data via the vehicle diagosntoc socket

2. To purchase a separate black version of Fetrotech tool, you can log into the official website (www.tuner-box.com), and click "Fetrotech pinout" under the "Download" category, and then enter your email and phone number to view the wiring diagrams as shown below.
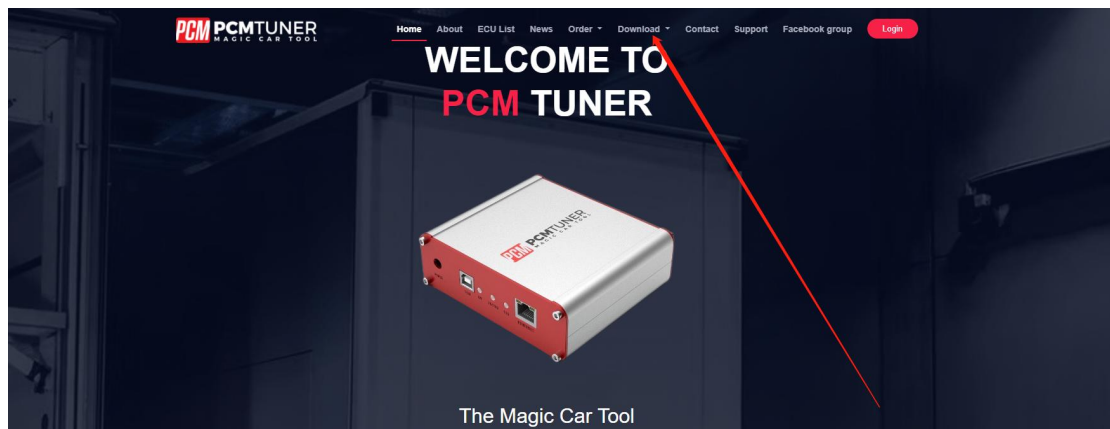
WELCOME
PCM TUNE

PCM Suite
MPM Driver
MPM Suite
PCMTuner Flash
Fetrotech Tool
Fetrotech pinout
WinOLS

The Magic Car Tool

CONTENTS

Fetrotech Pinout

9▓▓▓▓▓gmail.com

98▓▓▓▓▓

Save

PCMtuner

BMW_MD1CS001

🟥 Red +12v	🟨 Yellow Can H	🟩 Green Can L	⬛ Black Gnd

Fetrotech Plugs