




Please Note: The following instructions are compatible with any Windows-computer with a functional Internet connect. Please ensure your Internet is working properly before you

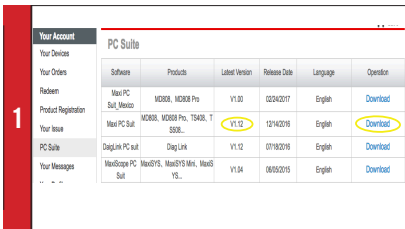


- Visit [www.autel.com](http://www.autel.com), and click on **Sign In** with your user ID and password. Select **PC Suite** from the left-hand side column.
- Select **Maxi PC Suite, V1.12** from the displayed list.
- Click **Download**. The application is compatible with only Windows-based computers.

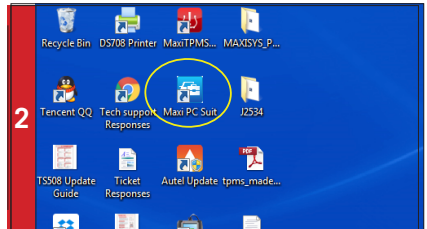


- Once downloaded and installed, the **Maxi PC Suite** icon will display on the desktop. Double-click the icon and the application will launch.

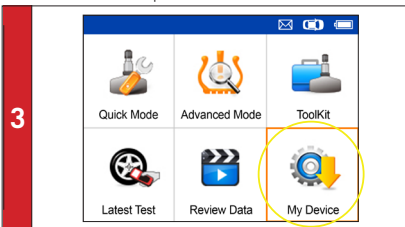


- Use the USB cable to connect the TS508 to the computer.
- Select **My Device** on the tool.
- Press **Y** button

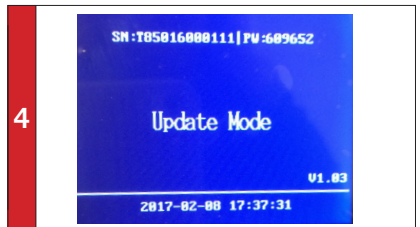


- Select **Update** and Press **Y** button to place the tool in Update mode.

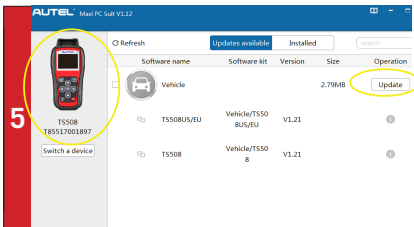


- The application will automatically scan for the tool. Once found, the tool and its serial number will display as well as a list of the available software updates.
- Click **Update** button to initiate software download.

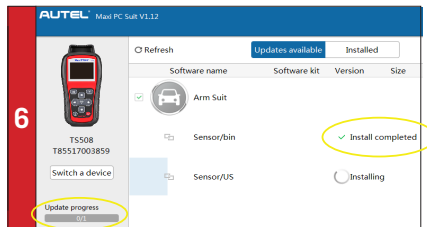

- Wait for all updates to complete. The update process can be monitored on the display. Click **Update** button to initiate software download.

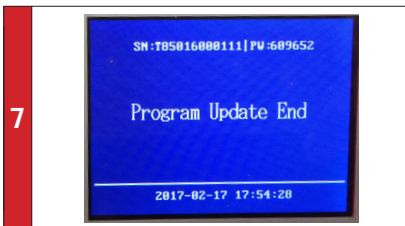

- Downloaded programs are installed automatically and will replace older version. The tool will display "Program Update End" once installation is complete.

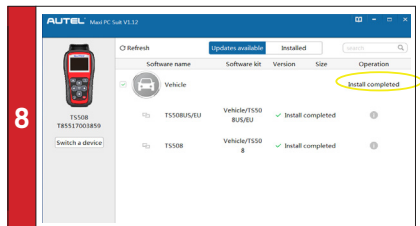

- Once ALL installations are complete, disconnect USB from PC.